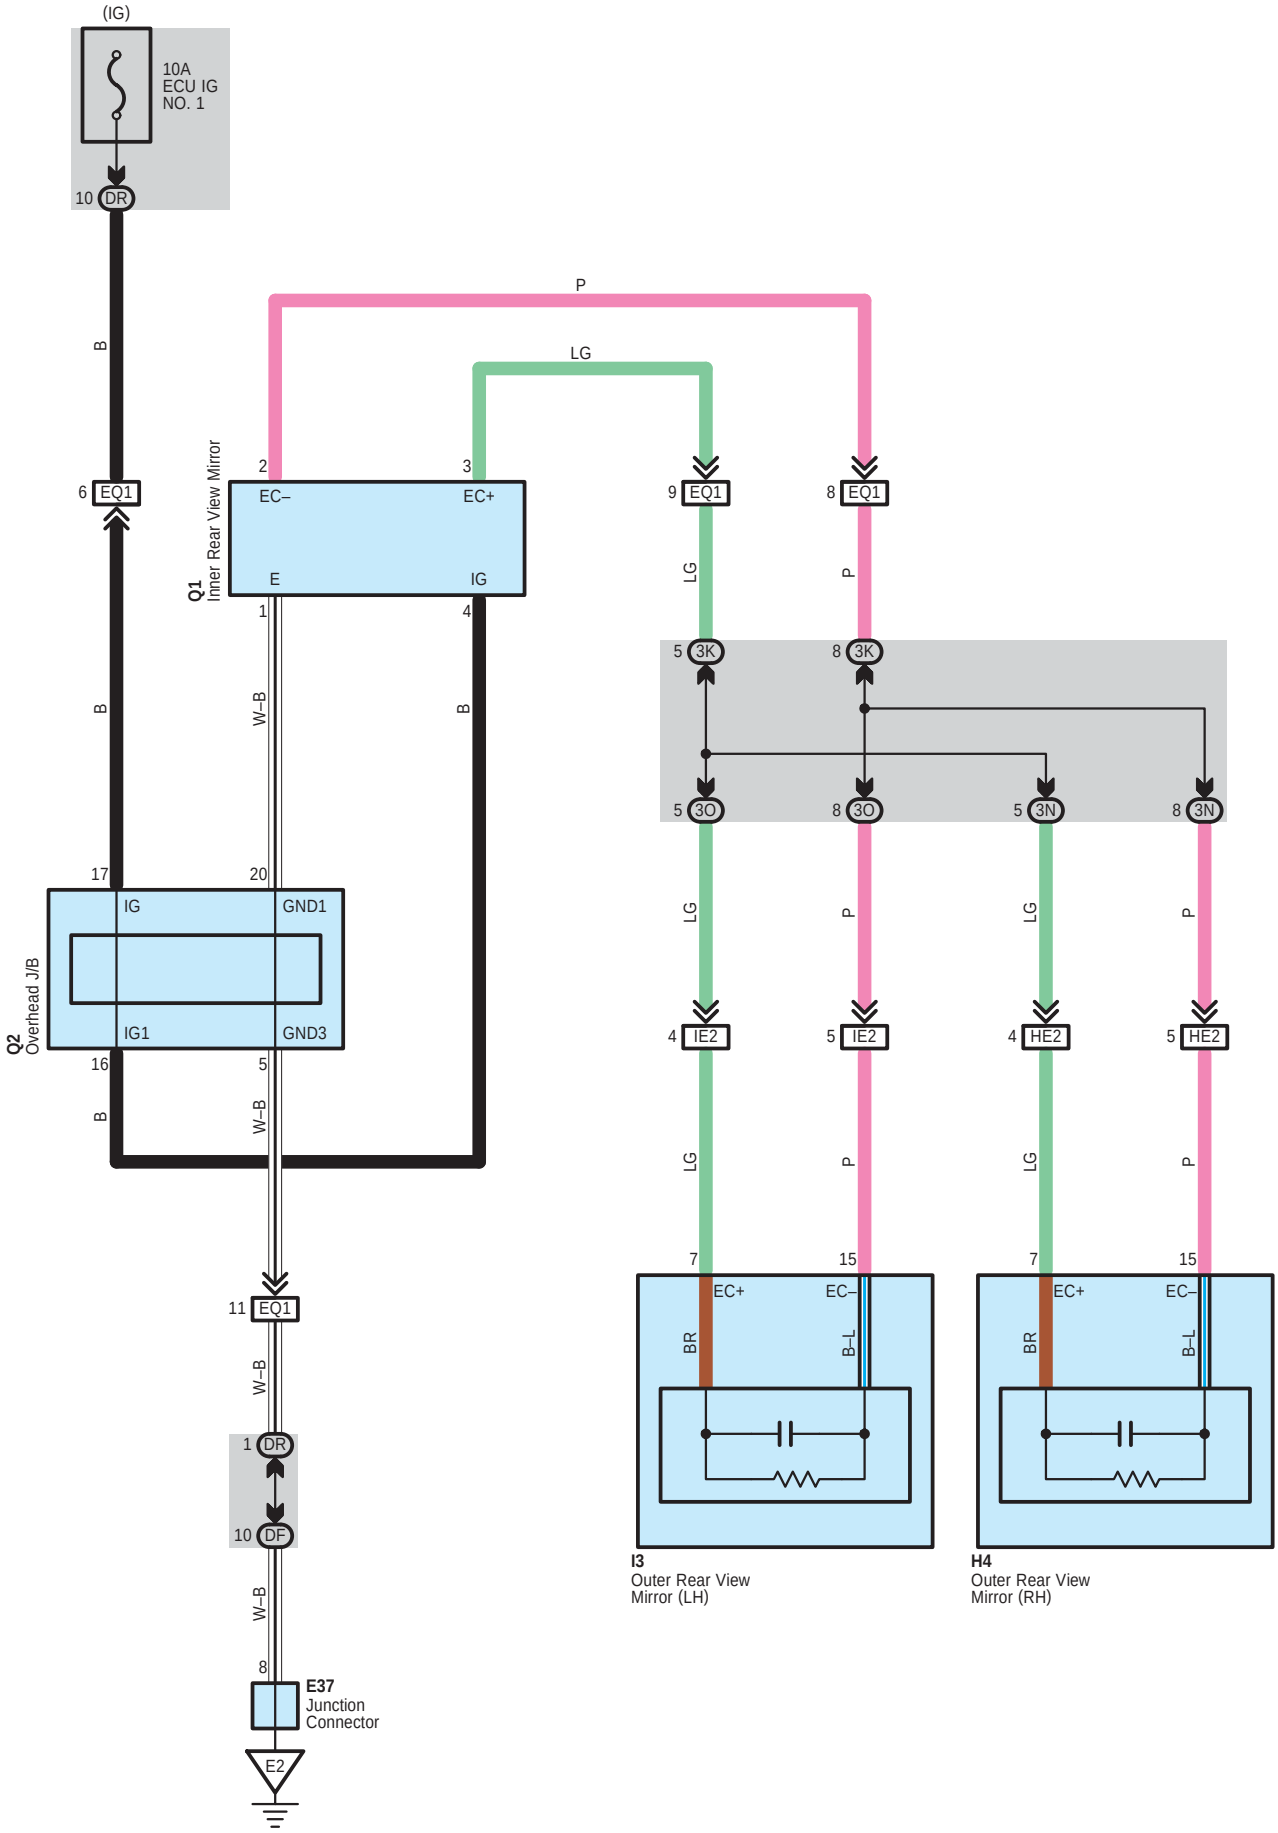
(IG)
10A
ECU IG
NO. 1
10 DR
B
6 EQ1
P
LG
2
3
EC–
EC+
E
IG
Q1
Inner Rear View Mirror
1
4
W–B
B
9 EQ1
8 EQ1
LG
P
5 3K
8 3K
5 3O
8 3O
5 3N
8 3N
17
20
IG
GND1
IG1
GND3
Q2
Overhead J/B
16
5
W–B
B
4 IE2
5 IE2
4 HE2
5 HE2
LG
P
7
15
EC+
EC–
BR
B–L
11 EQ1
W–B
1 DR
10 DF
W–B
8
E37
Junction
Connector
E2
I3
Outer Rear View
Mirror (LH)
H4
Outer Rear View
Mirror (RH)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E37	58	I3	63	Q2	64
H4	63	Q1	64		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3K	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3N		
3O		
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DR		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EQ1	69	Instrument Panel Wire and Roof Wire (Front Pillar LH)
HE2	69	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IE2	69	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
E2	69	Instrument Panel Brace LH